


'03 Nissan 350Z V6 3.5L

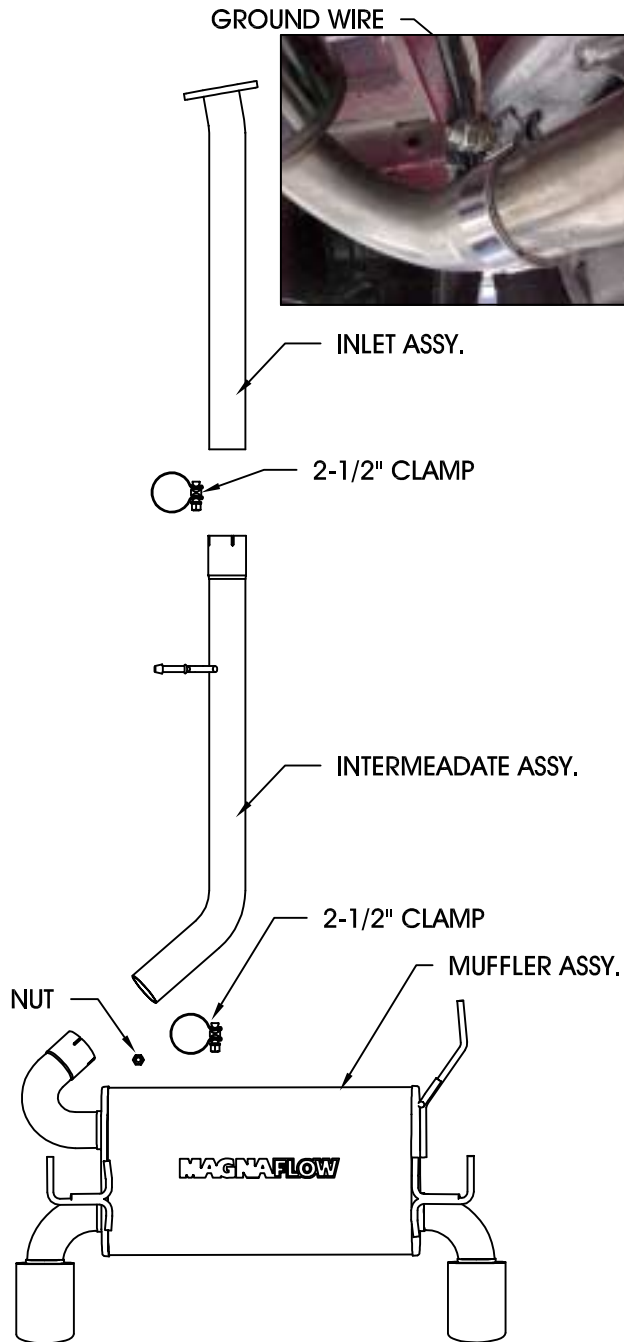

Warning: When working on under or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure safe work area. Serious injury or death could occur if safety measures are not followed.

Step 1: (Carefully read all instructions before installation) To remove the OEM exhaust system, you will need to unbolt the two-bolt flange located behind the catalytic converter. Disengage the welded hangers from the OEM rubber insulators. Do not damage or discard hardware or rubber insulators as they will be reused to install the new system. Carefully remove the ground wire located near OEM muffler.

Step 2: Install the Inlet assembly by bolting up the two flanges with the OEM hardware. Install the Intermediate assembly by fitting the welded hanger into the OEM rubber insulator and by sliding the inlet end over the outlet end of the Inlet assembly using the supplied 2.50" clamp loosely tighten the pipes together. Install the Muffler assembly by fitting the welded hangers into the OEM rubber insulators. Slide the Muffler assembly inlet over the Intermediate assembly outlet. Using the supplied 2.50" clamp loosely tighten the pipes together. Leave all fasteners loose for final adjustment of the complete system. After final adjustment take the ground wire and insert it over the 2-1/2" clamp and by using the supplied nut securely tighten the ground wire into place as shown in the diagram.

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

*MAGNAFLOW Performance Exhaust recommends professional installation on all their products

Technical support: 1-800-959-9226 ext. 4500

MAGNAFLOW Performance Exhaust - 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688