



520-538 INSTALLATION INSTRUCTIONS 04-06 Nissan Titan/Armada 5.6L

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AirAid @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AirAid.

Thank you for selecting Airaid.



Also available for your Nissan Titan/
Armada, the Airaid Intake System p/n
520-152. Call for details!

Parts List

- (1) Power Plate
- (1) "O"- Ring
- (4) 6mm x 70mm Hex Bolts
- (4) 6mm Flat Washers

Tools List

10mm Socket

Installation Instructions. Read Me!

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**

2. Remove throttle body air intake system.

3. Remove bolts from throttle body. (Ref. "B")

4. Install power plate using (4) 6mm bolts and (4) 6mm washers. (Ref. "B" & "C")

*** Please Note– Install "O"-Ring in power plate and face to throttle body.**


5. Inspect & Test throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables may require adjustment. Please refer to vehicle service manual for proper adjustment.

6. Reinstall air intake system using Step 2 as an example.

7. Reconnect battery cable. Enjoy!

The sound of power...The "whistle" means its working!

Ref. "A"- (1) Power Plate
(1) "O"-Ring

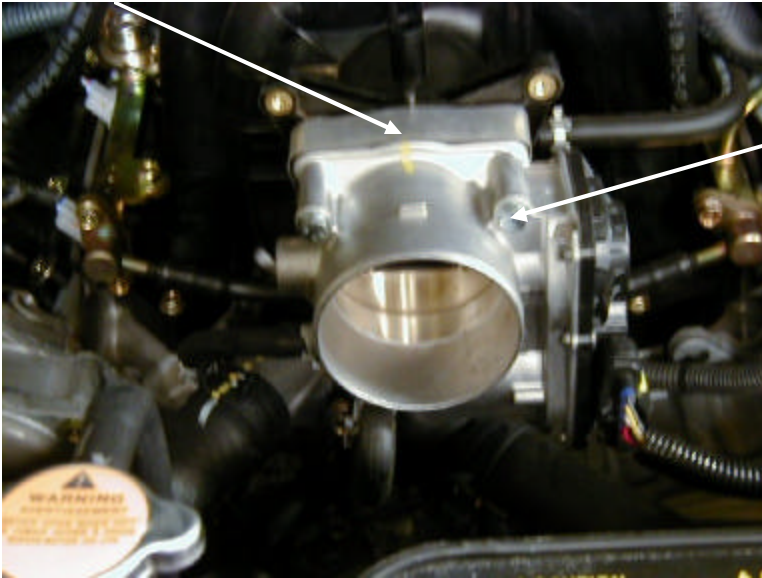

Ref. "B"- (4) 6mm x 70mm Hex Bolts
(4) 6mm Flat Washers