

# 2007 Toyota Tundra B-Cab, D-Cab, CrewMax

For Use with Vehicles with No Factory Mud  
Flaps

Set Part # 30910

Rev- A 06-01-07



## Step 1:

### Prior to Installation:

- A) **Fit:** Verify the fit of the flares to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- B) **Painting:** (Optional) if paint is desired it must be done prior to installing flares on the vehicle clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint.  
Paint flares using a high quality enamel, or polyurethane automotive paint. (Application of a primer coat is optional)  
If painting edge trim (not recommended), use a flex additive.
- C) **Performance:** Using larger Tires may increase the area required to turn the vehicle. Some Tire/Rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.
- D) **Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between flares and exhaust pipes.  
(Exhaust gases should not vent directly onto flares)
- E) **Metal Protection:** All exposed fasteners and bare metal should be treated with red oxide primer BEFORE installing flares. Spray inner fender wells with undercoating AFTER flare attachments have been completed.

## TOOLS FOR EASY INSTALLATION

- Socket Wrench
- 10mm Socket
- #2 Phillips Screwdriver
- Flat Head Screwdriver
- Grease Pencil
- Awl (optional)

## KIT COMPONENTS:

- 1 Set of Fender Flares
- 324" Edge Trim
- 18 Hex Screws
- 6 Black Tabs
- 6 "S" Clips
- 6 Serrated-Flange Screws
- 2 "U" Clips
- 2 Truss Head Screws
- 2 Plastic Grommets

## FLARE INSTALLATION PROCEDURES

### Step 2: Edge Trim Installation (See Illustration #1)

- A) Peel two to three inches of red vinyl backing away from edge trim tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle). **See Illustration #1**
- B) Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare.



Illustration #1

### Step 3: Front Flare Installation (See Photos #1 through #12)



1

Using a Phillips screwdriver, remove plastic fastener from front of wheel well. Note: For the Limited version, a flat head screw driver will be needed.



2

Start a supplied Hex Screw through top rear hole in flare and into factory hole in rear of wheel well.



3

Hex Screw location.



4

Hold the front of the flare firmly on the fender. Starting with the second hole from the front of the flare, mark three clip locations with a grease pencil.



5

"S" Clip locations.



6

Remove flare from fender. Center a supplied Black Tab over each mark made in Step 4.



7

Slide a supplied "S" Clip over each Tab.



8

Slide a supplied "U" Clip over the fender lip, aligning with forward-most hole in fender. Note: For the Limited version, skip this step.



9

Align holes in flare with holes in clips. Start three supplied Serrated-Flange Screws through three holes in flare and into "S" Clips installed in Step 7. Note: It is helpful to use an awl to located holes in clips.



10

Start two supplied Hex Screws through two lower rear holes in flare and into factory holes in rear of wheel well.



11

Hex Screw locations.



12


Start a supplied Truss Head Screw through forward-most hole in flare and into "U" Clip installed in Step 8. Note: For the Limited version, install this screw directly into hole in fender. Ensure flare is properly positioned and tighten all screws.

#### Step 4: Rear Fender Flare Installation (See Photos #13 through #16)



13

Using a socket wrench with a 10mm socket, remove lower screw from front of rear wheel well as shown.

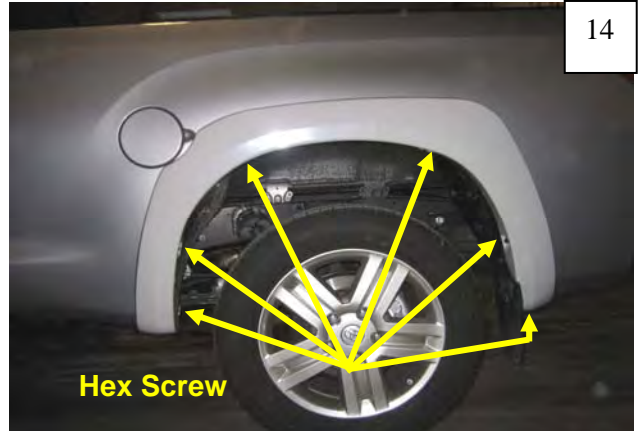

14

Hold the flare firmly on the fender. Start a supplied Hex Screw through each hole in flare and into hole in fender (six places).



15

Note: If the lower rear wheel well does not contain a plastic grommet, insert a supplied one into the factory hole as shown.



16

Ensure Flare is properly positioned and tighten all screws.