

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FORD CENTER HUMPH LINER

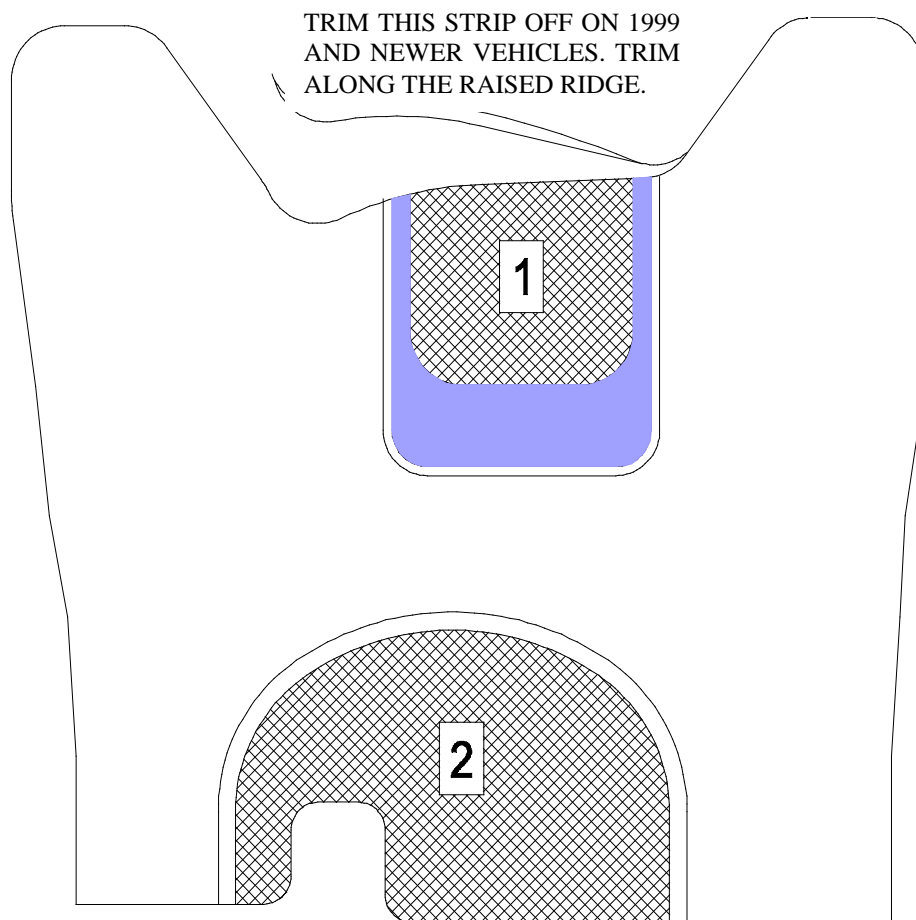

NOTE: IF YOUR VEHICLE HAS A MANUAL TRANSMISSION AND IS A 1997 OR 1998 MODEL REMOVE THE TREAD PLATE FROM AREA "1" SHOWN ABOVE. IF IT IS A 1999 OR 2000 MODEL, TRIM OUT ALL THE MATERIAL INSIDE THE 1/2 INCH BAND. IF YOUR VEHICLE HAS A CENTER CONSOLE, TRIM THE MATERIAL AWAY FROM AREA "2" SHOWN ABOVE. A UTILITY KNIFE OR HEAVY SCISSORS WORK WELL FOR TRIMMING